ES-G130471-1

条形码定位框 35x10.5mm
物料号：

Hisense

QUICK SETUP GUIDE

HLUD58XT880 HLUD65XT880

1 ACCESSORIES LIST

- User Manual
- Quick Setup Guide
- Warranty Card
- Remote Control
- Batteries: AAA × 2
- 3D Glasses × 1
- Screw (M5×16) × 10
- Stick Spacer × 2

• If the item is not specified in the accessories list, it should be provided by customer.
• Recommend the active shutter 3D glasses model FPS3D07A. Other brands 3D glasses may not be supported.

2 INSTALLING THE STAND

CAUTION

Carefully place your TV facedown on a soft, cushioned surface to prevent damage to the TV or scratching to the screen.

❶

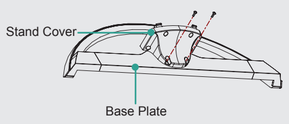

Take out the stand accessories, Insert the stand cover into the base plate, and secure them with 2 provided screws (M5 x 16).

❷

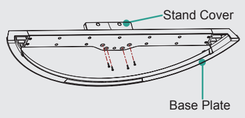

Secure the stand cover to the base plate vertically with the 4 provided screws (M5 x 16).

❸

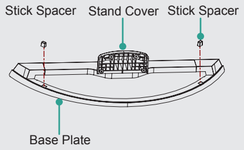

Stick 2 spacers onto the positions as illustration.

❹

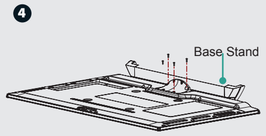

Secure the base stand to the TV with the 4 provided screws (M5 x 16).

NOTE

Product image is only for reference, actual product may vary in appearance.

SECURING THE INSTALLATION SPACE

Make sure that your TV has adequate air circulation. Allow enough space around the TV as shown below. Avoid operating the TV at temperatures below Inadequate air 41°F (5°C).

Install with stand

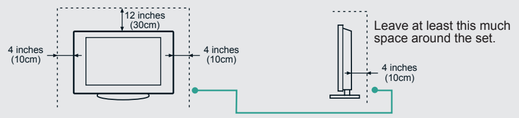

Never install the TV set as follows:

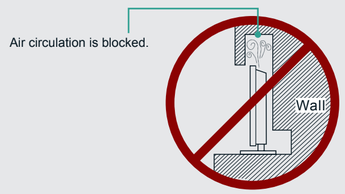

CAUTION

Inadequate air circulation can lead to overheating of the TV and may cause damage to your TV or cause a fire.

3 VIEWING THE REMOTE CONTROL

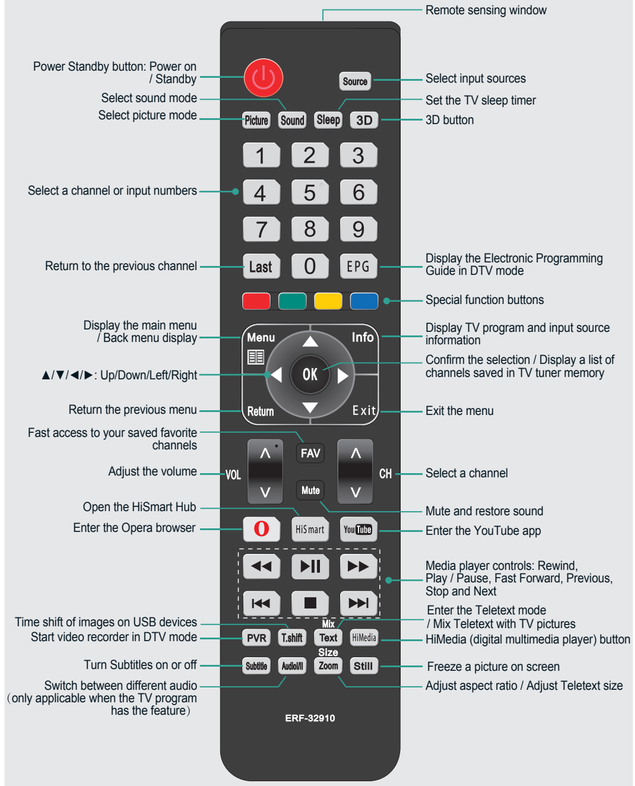

CHANGE THE BATTERIES

1. Slide open the battery cover on the back of the remote control.
2. Install two AAA size (1.5V) batteries. Match the “+” and “-” signs on the batteries to the signs on the battery compartment.
3. Close the battery cover.

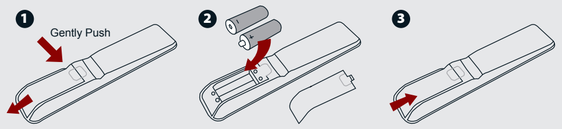

NOTES

- **Dispose of your batteries in a designated disposal area. Do not throw the batteries into fire.**
- **Do not mix battery types or combine used batteries with new ones.**
- **Remove depleted batteries immediately to prevent battery acid from leaking into the battery compartment.**
- **If you do not intend to use the remote control for a long time, remove the batteries.**
- **The effective range of remote control is suggested in the figure below.**

Match the Remote Control with TV

1. Please ensure that your TV is switched on.
2. Aim the remote control at the left-bottom of the TV within 4 inches.
3. Press the [Last] and [EPG] buttons on your remote control simultaneously for at least 3 seconds, the LED light on your remote control will light up three times to indicate successful pairing.

NOTE

If the LED is black, the remote has failed to pair with the TV, repeat the pairing procedure.

4 MAKING CONNECTIONS

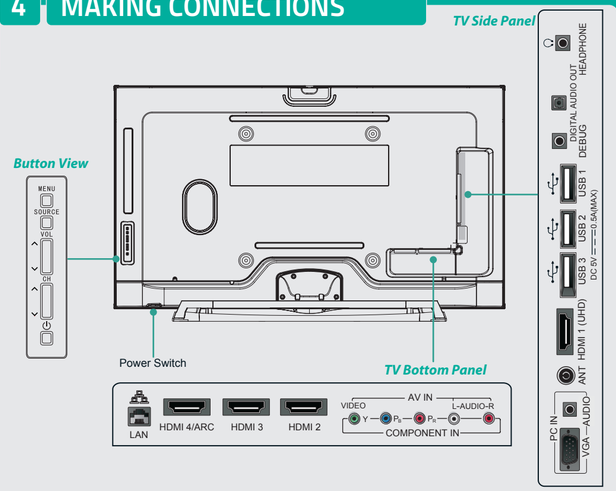

Check the jacks' for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.

ANT Connect an outdoor VHF/UHF antenna.

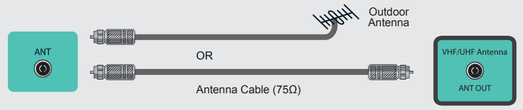

LAN Connect an ethernet cable to access a network or the Internet.

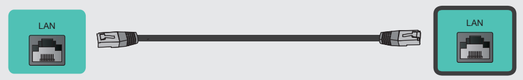

Turning the TV On for the First Time

The Installation Guide Menu appears the first time you turn on the TV. It will assist you to specify the Remote Pair, Language Setting, Country Setting, Time Zone Setting (just for Australia area), Use Mode, Network Setting and Channel Search.

• Press [POWER] to turn on your TV, it will go straight into Setup Wizard menu
• Press [▲/▼/◄/►] buttons to navigate the menu and change the settings. Press [OK] button to confirm.

Remote Pair - Match your remote control with your TV according to the instructions.

Language Setting - Select your desired language to be displayed on the menu.

Country Setting - Select the country where you will operate the TV.

Time Zone Setting - Select the local time zone according to your region.

Use Mode - Select your Mode Setting: Home Mode or Shop Mode.
Home Mode is the recommended setting which offers full functionality of the television.

Network Setting - Connect an Ethernet cable to access a network or the Internet. TV also features wireless connectivity. For more information, see “Using the Network Menu”.

Channel Search - Search and store all available TV channels automatically.

HDMI / COMP / AV

Connect an HDMI cable or Comp/AV Adapter from an external A/V equipment. No sound connection is needed for HDMI to HDMI connection. If the device signal resolution does not match the specification table you need to change the setting of device according to the table. Please consult your device user manual for instruction.

• To select the HDMI / Component / AV
Press [Source] button, when the list of Input Source appears, press [▲/▼] to select the source [HDMI] / [Component] / [AV], then press [OK] to connect.

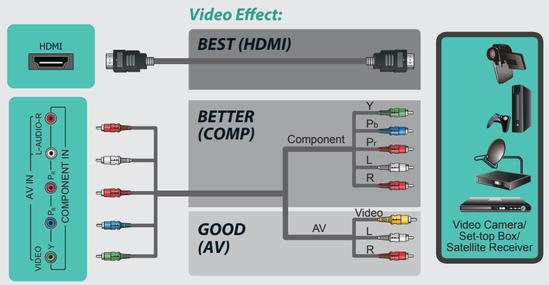

VGA & AUDIO

Connect a VGA cable and an audio cable from the PC.

• To select the VGA: Press [Source] button, when the list of Input Source appears, press [▲/▼] to select the source [VGA], then press [OK] to connect.

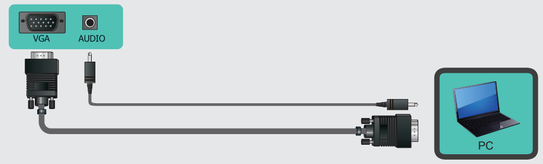

USB

Connect a USB 2.0 device port for browsing photos, listening music and watching recorded movies.

• To select the USB device: Press [Source] button, when the list of Input Source appears, press [▲/▼] to select the source [HiMedia], then press [OK] to connect. Or press [HiMedia] to directly enter the HiMedia menu



DIGITAL AUDIO OUT

Connect an optical cable from an external digital audio system (Toslink optical cable is needed).



HEADPHONE Connect Headphone for audio out of the TV.

DEBUG Just for factory used, it can't be inserted any equipment.

5 SPECIFICATIONS

Model	HLUD58XT880	HLUD65XT880
Size with base (mm)	1300×795×345	1460×876×345
Size without base (mm)	1300×754×59	1460×852×65
Weight with base (kg)	29	44
Weight without base (kg)	36	37
Screen Diagonal Size	58 inches	65 inches
Screen Resolution	3840 × 2160	3840 × 2160
Sound Output (RMS)	10 W + 10 W	10 W + 10 W
Power Consumption	220 W	250 W
Power Supply	100V - 240V ~ 50Hz/60Hz	
Colour System	PAL NTSC	
Television System	PAL B DVB-T	
Environmental Conditions	Temperature: 5°C - 45°C Humidity: 20% - 80% RH Atmospheric pressure: 86 kPa - 106 kPa	
Component mode	480I/60Hz, 480P/60Hz, 576I/50Hz, 576P/50Hz, 720P/50Hz, 720P/60Hz, 1080I/50Hz, 1080I/60Hz, 1080P/50Hz, 1080P/60Hz	
VGA mode	640×480, 800×600, 1024×768, 1280×1024 60Hz	
HDMI mode	480I/60Hz, 480P/60Hz, 576I/50Hz, 576P/50Hz, 720P/50Hz, 720P/60Hz, 1080I/50Hz, 1080I/60Hz, 1080P/50Hz, 1080P/60Hz 640×480, 800×600, 1024×768 3840x2160/24Hz, 3840x2160/25Hz, 3840x2160/30Hz only for UHD port	

NOTE

- **Sources of UHD (4K) content must be connected to the HDMI-1 input. For the moment digital television channels do not deliver UHD content.**
- **Features, appearance and specifications are subject to change without notice.**

If you encountered difficulty when setting up your TV, we suggest you refer to the Trouble Shooting tips in the User Manual.